




105B 台顶式

精密医用弹簧缠绕机

■105B 台顶式精密医用弹簧缠绕机

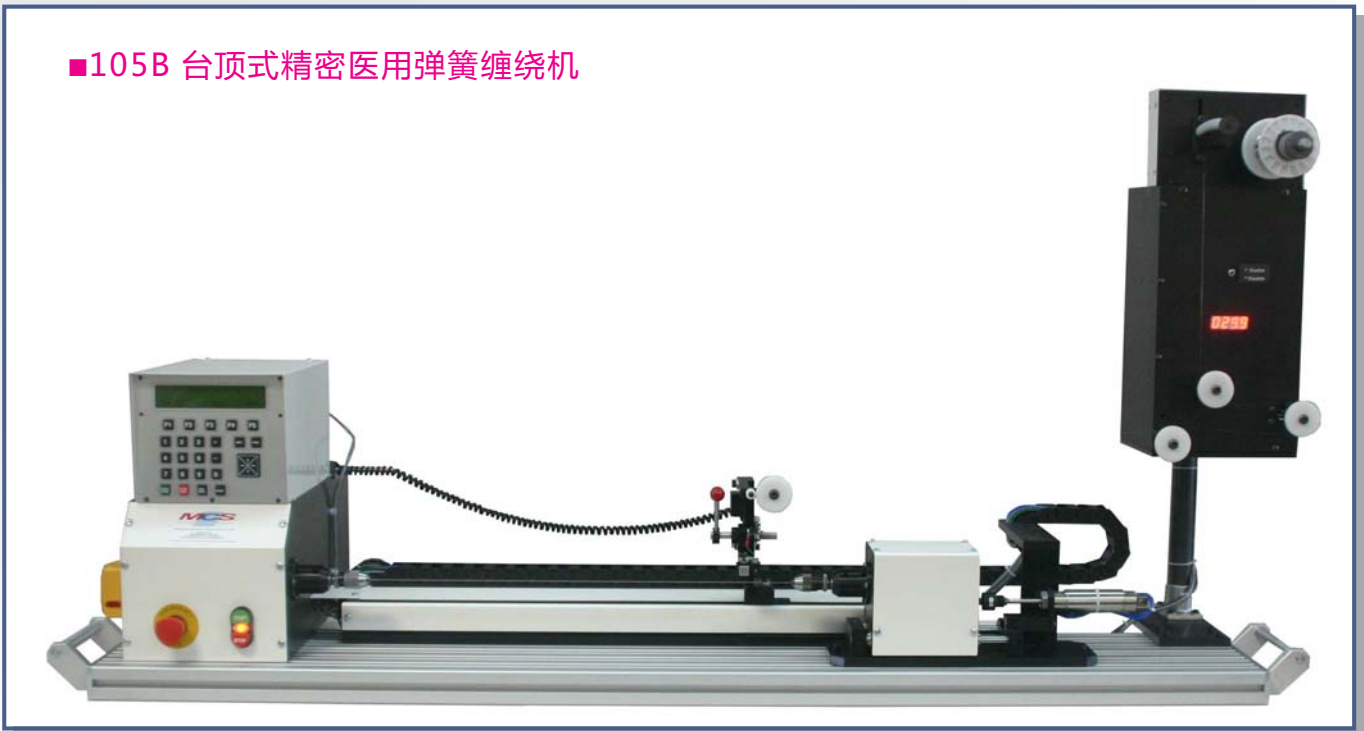

105B 绕簧机是一个专门为实验室设计的低产能实验设备，它只适合生产MCS1控制的长度，没有自动功能，上图展示与设备一起展示的是包含MCS1控制部分的1100型紧密张紧轮。

Model 1100



Model 1100 Closed Loop Payoff Tensioner

The Model 1100 is a true servomotor driven closed loop payoff tensioner. It is designed to maintain a preset tension in grams whether the wire is moving or stationary. If the wire is taken up by a winding machine the servomotor will turn the supply spool at the rate the material is absorbed while maintaining tension. The tension is measured by a load cell. The Model 1100 can act as a stand alone unit or it can be interfaced to the winder control and adjust tension according to the winding recipe. The Model 1100 tensioner comes in different sizes base on wire gauge and spool size. The size shown above operates from 10 to 300 grams.

亚洲代理:


HnG 加拿大HnG医学技术有限公司中国分公司

中国宁波保税区东区创业大厦9楼, 邮编315800
电话: 0574-86995199 传真: 0574-86995197
电子邮件: info@hngmedical.com



Machine Control Specialists, Inc.

398 Monaco Drive
Roselle, IL 60172-1954
Voice: 630-980-3200 Fax: 630-980-3249
Web: www.mcsinc.com Email: info@mcsinc.com

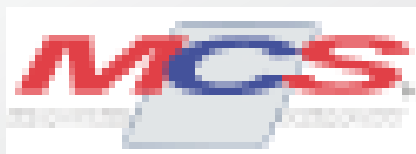

105B 台顶式

精密医用弹簧缠绕机

Model 105L Long Bed Precision Medical Coil Winder



The new specially designed series of machines are capable of "mandrel" winding catheters, guidewires and other precision medical coils. Typical coils have .001-.025 inch (.025-.630mm) diameter medical grade stainless steel wire wound over an .001-.188 inch (.025-4.75mm) diameter mandrel. The machines rotate a long mandrel wire between two synchronized spindles while a special nozzle guides the wire. A programmable closed loop tensioner is used to precisely control winding tension. Pitch is calculated to .000001 inch (.0001mm) accuracy and can be changed in .01 revolution of the mandrel. The machine is available in 72, 84, 96, 108, 120 inch (1200, 1500, 1800, 2100, 2400mm) manual or fully automatic versions.



Machine Control Specialists, Inc.

398 Monaco Drive
Roselle, IL 60172-1954
Voice: 630-980-3200 Fax: 630-980-3249
Web: www.mcsinc.com Email: info@mcsinc.com

亚洲代理:

HnG 加拿大HnG医学技术有限公司中国分公司

中国宁波保税区东区创业大厦9楼, 邮编315800
电话: 0574-86995199 传真: 0574-86995197
电子邮件: info@hngmedical.com